

# MAINTENANCE CHART

Interval: This interval should be judged by number of months or odometer reading, whichever comes first.

Item	Interval	months	2	12	24	36	48
		km	1000	6000	12000	18000	24000
		miles	600	3750	7500	11250	15000
Air cleaner element (☞ 3-17)			—	I	I	R	I
* Exhaust pipe bolts and muffler bolts			T	—	T	—	T
* Valve clearance			—	—	—	—	I
* Spark plugs			—	I	R	I	R
Fuel hose (☞ 3-31)			—	I	I	I	I
*Replace every 4 years							
* Evaporative emission control system (if equipped)			—	—	I	—	I
Engine oil (☞ 3-19)			R	R	R	R	R
Engine oil filter (☞ 3-19)			R	—	—	R	—
Throttle cable play (☞ 3-30)			I	I	I	I	I
* PAIR (air supply) system			—	—	I	—	I
* Throttle bore cleaning			—	—	I	—	I
* Throttle valve synchronization			—	—	I	—	I
* Engine coolant (☞ 3-26)	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years or 48000 km (30000 miles)					
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)		—	—	R	—	R
Radiator hose (☞ 3-29)			—	I	I	I	I
Clutch fluid (☞ 3-34)			—	I	I	I	I
*Replace every 2 years							
Clutch hose (☞ 3-35)			—	I	I	I	I
*Replace every 4 years							
Drive chain (☞ 3-31)			I	I	I	I	I
Clean and lubricate every 1000 km (600 miles)							
* Brakes (☞ 3-35)			I	I	I	I	I
Brake fluid (☞ 3-36)			—	I	I	I	I
*Replace every 2 years							
Brake hose (☞ 3-35)			—	I	I	I	I
*Replace every 4 years							
Tires (☞ 3-41)			—	I	I	I	I
* Steering			I	—	I	—	I
* Front forks			—	—	I	—	I
* Rear suspension			—	—	I	—	I
* Chassis bolts and nuts			T	T	T	T	T
Lubrication (☞ 3-13)			Lubricate every 1000 km (600 miles)				

NOTE: I= Inspect and clean, adjust, replace or lubricate as necessary, R= Replace; T= Tighten