

# For Europe and Oceania countries

Interval		months	2	12	24	36	48
		km	1000	12000	24000	36000	48000
		miles	600	7500	15000	22500	30000
Item							
Air cleaner element (☞ 3-17)			—	I	I	R	I
* Exhaust pipe bolts and muffler bolts			T	T	T	T	T
* Valve clearance			Inspect every 24000 km (15000 miles)				
* Spark plugs			—	R	R	R	R
Fuel hose (☞ 3-31)			—	I	I	I	I
			*Replace every 4 years				
* Evaporative emission control system (if equipped)			—	—	I	—	I
Engine oil (☞ 3-19)			R	R	R	R	R
Engine oil filter (☞ 3-19)			R	—	R	—	R
Throttle cable play (☞ 3-30)			I	I	I	I	I
* PAIR (air supply) system			—	—	I	—	I
* Throttle bore cleaning			—	I	I	I	I
* Throttle valve synchronization			—	I	I	I	I
* Engine coolant (☞ 3-26)	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)		—	—	—	—	R
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)		—	—	R	—	R
Radiator hose (☞ 3-29)			—	I	I	I	I
Clutch fluid (☞ 3-34)			—	I	I	I	I
			*Replace every 2 years				
Clutch hose (☞ 3-35)			—	I	I	I	I
			*Replace every 4 years				
Drive chain (☞ 3-31)			I	I	I	I	I
			Clean and lubricate every 1000 km (600 miles)				
* Brakes (☞ 3-35)			I	I	I	I	I
Brake fluid (☞ 3-36)			Inspect every year or 6000 km (4000 miles)				
			*Replace every 2 years				
Brake hose (☞ 3-35)			—	I	I	I	I
			*Replace every 4 years				
Tires (☞ 3-41)			—	I	I	I	I
* Steering			I	I	I	I	I
* Front forks			—	I	I	I	I
* Rear suspension			—	I	I	I	I
* Chassis bolts and nuts			T	T	T	T	T
Lubrication (☞ 3-13)			Lubricate every 1000 km (600 miles)				

NOTE: I= Inspect and clean, adjust, replace or lubricate as necessary,  
R= Replace, T= Tighten